



Quick Guide



INTRON-X Service Tool

XST



XST herunterladen

1. QR Code scannen/den Link öffnen.
<https://download.industronic.software/xst>
2. Installationsdatei downloaden und speichern.
3. Auf Installationsdatei doppelklicken.
4. Bei Sicherheitshinweis auf *Ja* klicken.
5. Anweisungen im Installationsassistenten folgen.
✓ XST erfolgreich installiert.



XST Pro aktivieren

1. Auf ⓘ > *Service Tool Aktivierung* klicken.
▶ Fenster *XST-Aktivierung* wird geöffnet.
2. Auf *Upgrade auf Professional* klicken.
3. Aktivierungsschlüssel eingeben.
4. Auf *Upgrade* klicken.
▶ Aktivierungsschlüssel wird auf Gültigkeit geprüft.
✓ XST erfolgreich auf Pro-Version aktualisiert.



Quick Guide



INTRON-X Service Tool



Download the XST

1. Scan the QR code/open the link.
<https://download.industronic.software/xst>
2. Download and save the installation file.
3. Double-click the installation file.
4. Confirm the prompt with Yes.
5. Follow the instructions in the installation wizard.
✓ XST successfully installed.



Activate XST Pro

1. Click on  > *Service Tool Activation*.
▶ The *XST Activation* window opens.
2. Click on *Upgrade to Professional*.
3. Enter the activation key.
4. Click on *Upgrade*.
▶ Activation key is checked for validity.
✓ XST successfully upgraded to Pro version.